

Shutter Button (p. 38)

Optical Viewfinder Window (p. 37)

Microphone (PowerShot A40 only)

AF-assist Beam (p. 39)

Red-Eye Reduction Lamp (p. 52)

Self-Timer Lamp (p. 60)

Flash (p. 52)

Terminal Cover


Lens

Ring Release Button

DIGITAL Terminal*

A/V OUT (Audio/Video Out) Terminal (PowerShot A40)
VIDEO OUT Terminal (PowerShot A30) (p. 124)

DC IN Terminal (p. 146)

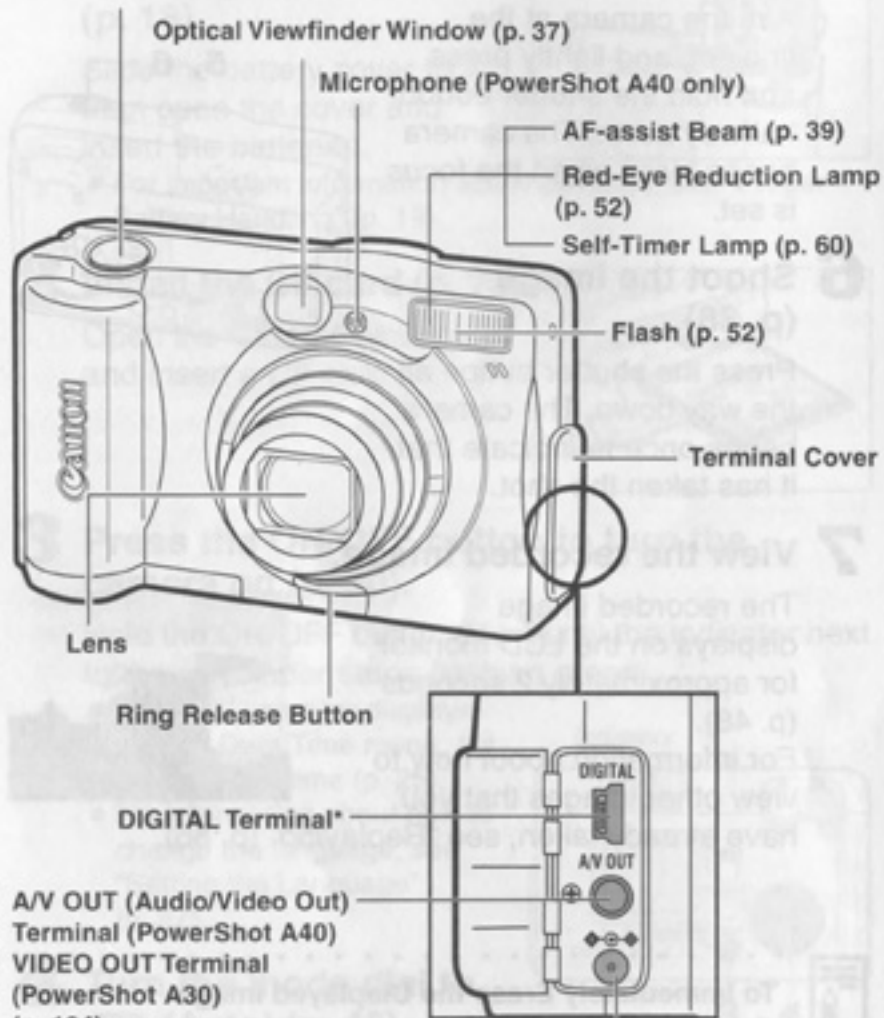

LCD Monitor* (p. 32)

CF Card Slot Cover (p. 22)

Viewfinder (p. 37)

ON/OFF Button (p. 30)

Strap Eyelet (p. 29)

Date Battery Holder (p. 142)

Battery Cover (p. 18)

Battery Cover Lock (p. 18)

Tripod Socket

MENU (Menu) Button (p. 41)

(Macro)/(Snapshot)/(Infinity)/(Right)/AF Lock Button (p. 55)

(Continuous)/(Self-Timer)/(Left)Button (pp. 59, 60)

(Flash)/SET (Set) Button (p. 52)

